

## Datasheet for #sbcw6424 DN

### Recommendations:

Please read the User Manual and have a look at the FAQ at  
<http://www.alpeslasers.ch/?a=142>

**WARNING:** Operating the laser with higher current or voltage than specified in this document may cause damage and will result in loss of warranty, unless Alpes Lasers has permitted to do so!

**WARNING:** Beware of the polarity of the laser. This laser has to be powered with negative current on the laser contact (= bonding pad, corresponding to the label "laser" on the LLH) and the positive current on the base contact (= submount, corresponding to the label "base" on the LLH). To be used with a high compliance CW laser driver capable of reaching the operating current and voltage indicated in this datasheet, or up to 2.5A/20V.

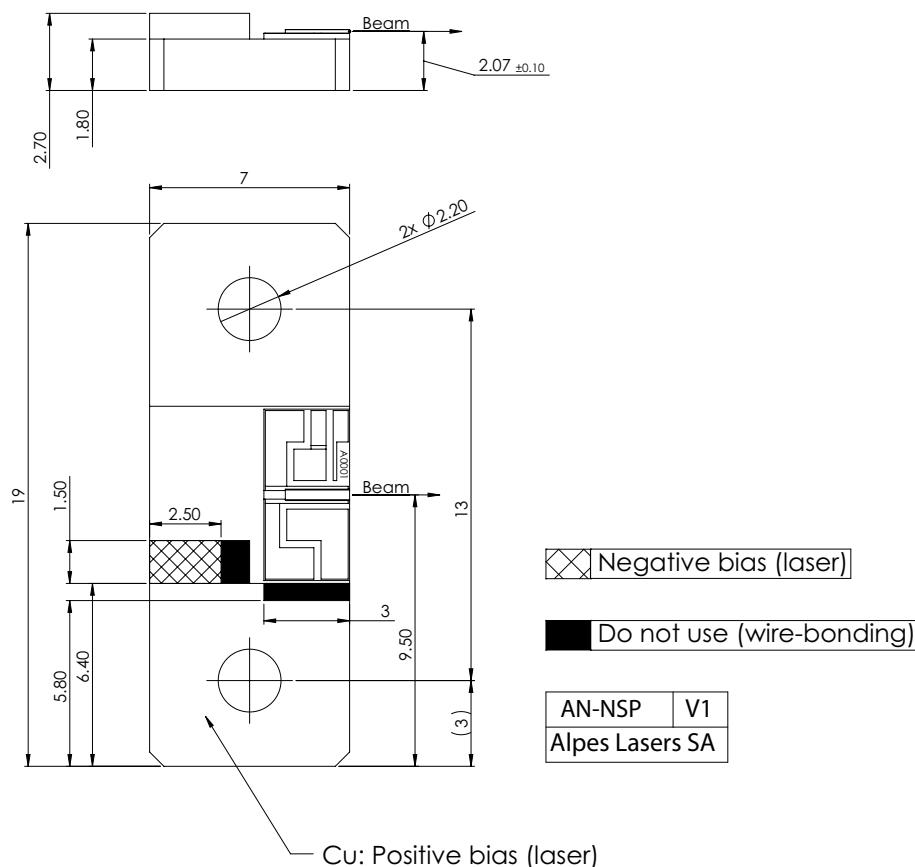


Figure 1: Mechanical and electrical interface for #sbcw6424 DN

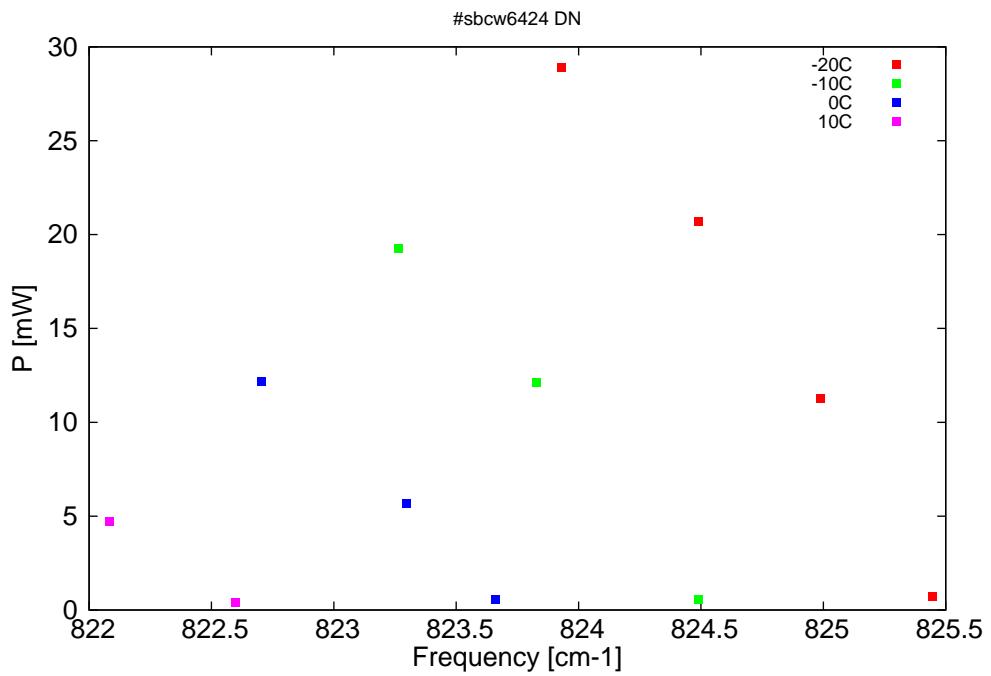


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

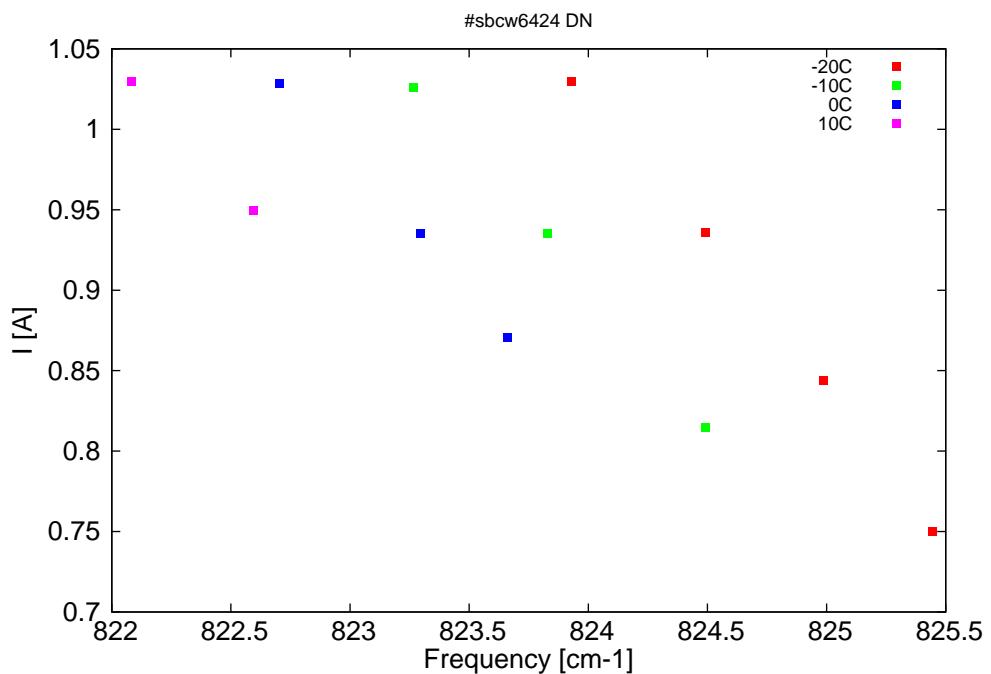


Figure 3: Applied DC current as a function of singlemode emission frequencies and temperatures

$\lambda$ [nm]	$\nu$ [cm $^{-1}$ ]	P[mW]	Temp[°C]	$U_{LASER}$ [V]	I[A]
12114.7	825.4	0.7	-20	7.17	0.75
12121.4	825	11.3	-20	7.45	0.844
12128.7	824.5	20.7	-20	7.74	0.936
12137	823.9	28.9	-20	8.05	1.03
12128.7	824.5	0.6	-10	7.32	0.814
12138.5	823.8	12.1	-10	7.7	0.935
12146.7	823.3	19.3	-10	8.01	1.026
12140.9	823.7	0.5	0	7.47	0.871
12146.3	823.3	5.7	0	7.68	0.935
12155	822.7	12.2	0	7.99	1.029
12156.6	822.6	0.4	10	7.7	0.949
12164.2	822.1	4.7	10	7.97	1.029

Table 1: Singlemode optical output power as function of operating parameters.

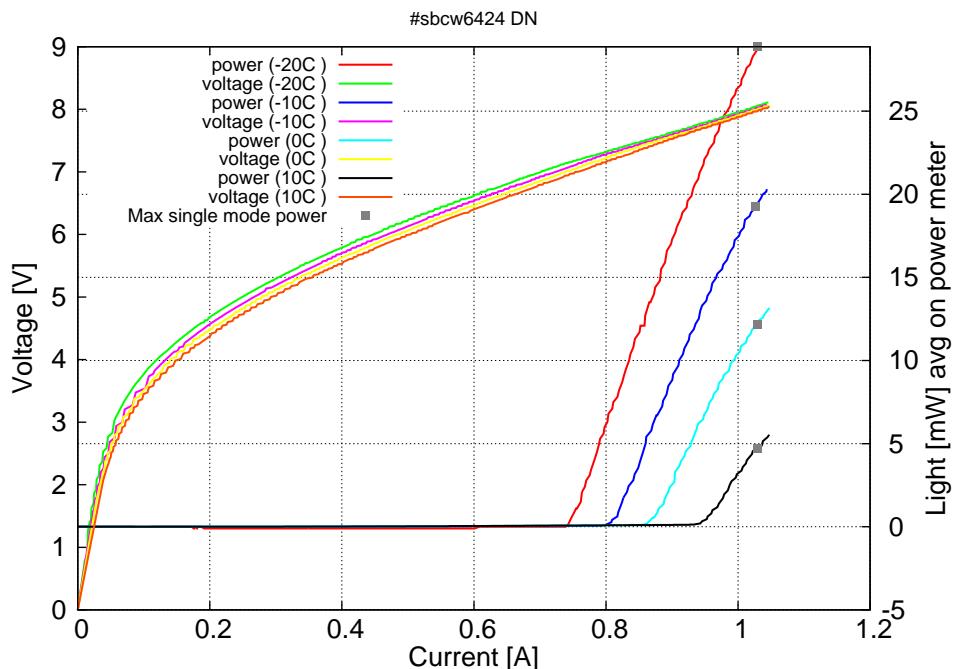


Figure 4: voltage and avg power vs current in continuous-wave operation (the solid squares indicate the maximum singlemode emitted power)

Note: at -20C:  $I_{th}=0.73A$  /  $V_{th}=7.1V$  (2-wires measurements). Maximum operation current: 1.050A for all temperatures.

Figure 3: spectra at different temperatures for various DC currents

