

## Datasheet for #sb4059 DN

### Recommendations:

Please read the starter kit user manual, if available, and have a look at the FAQ at <http://www.alpeslasers.ch/alphaq.pdf>

**WARNING:** Operating the laser with longer pulses, higher repetition rate, higher voltage or higher current than specified in this document may cause damage. It will result in loss of warranty, unless agreed upon with Alpes Lasers!

**WARNING:** Beware of the polarity of the laser. This laser has to be powered with negative bias on the laser contact (= bonding pad, corresponding to the label "laser" on the LLH) and the positive bias on the base contact (= submount, corresponding to the label "base" on the LLH).



Figure 1: Support mounting for #sb4059 DN (please note that the laser is connected to the DN pad drawn in blue)

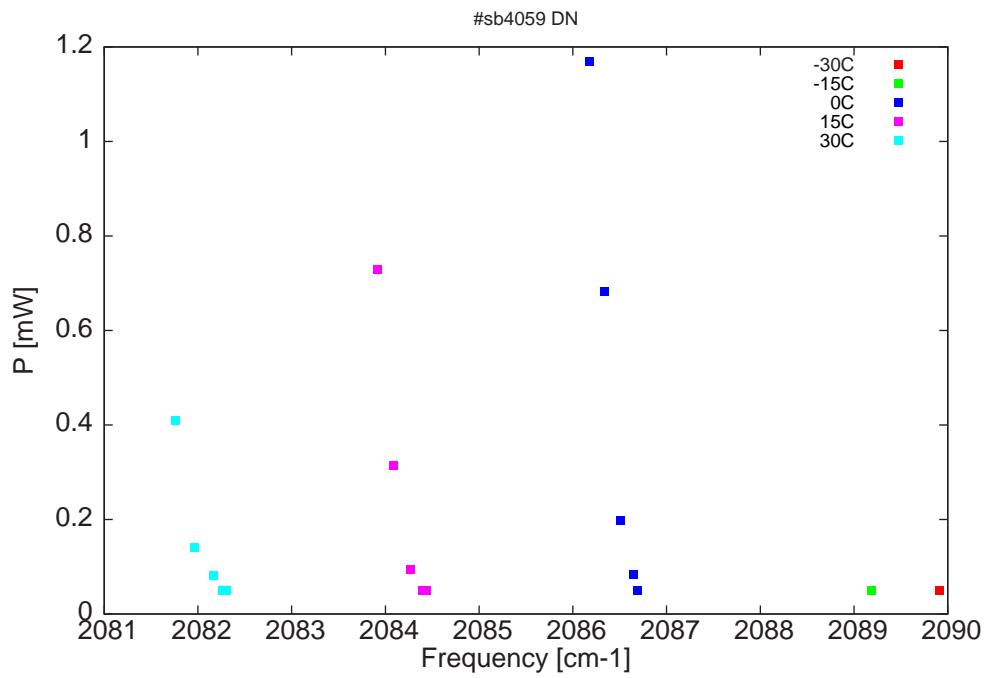


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

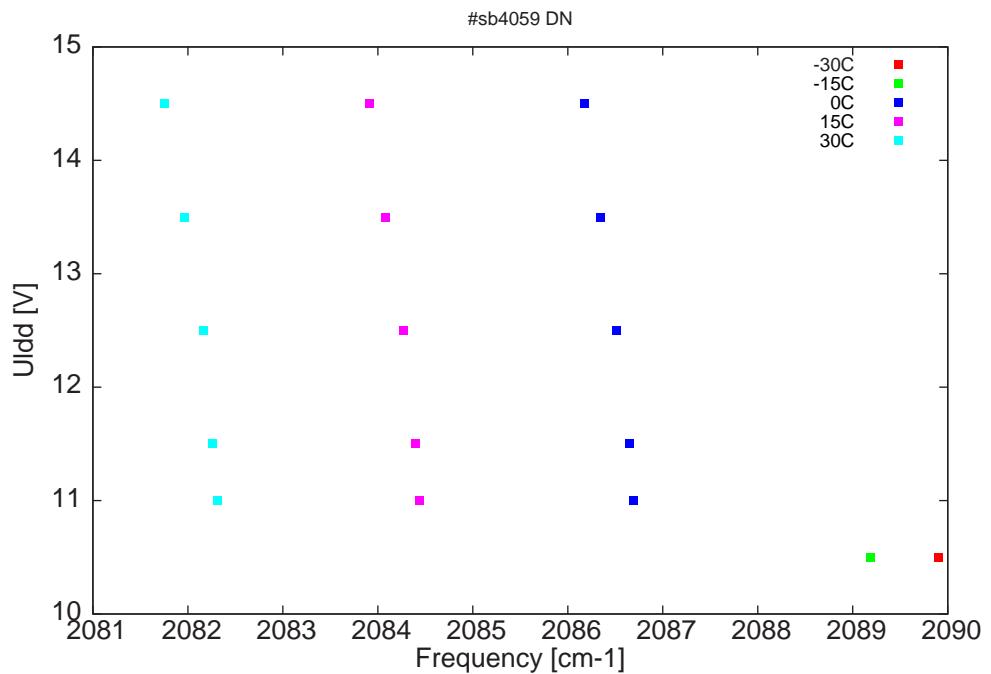


Figure 3: DC voltage fed to LDD (Uldd) as a function of the singlemode emission frequencies and temperatures

$\lambda$ [nm]	$\nu$ [cm $^{-1}$ ]	P[mW]	Temp[°C]	$U_{LDD}$ [V]	$I_{pulse}$ [A]
4784.9	2089.9	0.1	-30	10.5	0.35
4786.5	2089.2	0.1	-15	10.5	0.37
4792.3	2086.7	0.1	0	11	0.46
4792.4	2086.6	0.1	0	11.5	0.52
4792.7	2086.5	0.2	0	12.5	0.65
4793.1	2086.3	0.7	0	13.5	0.77
4793.5	2086.2	1.2	0	14.5	0.88
4797.5	2084.4	0.1	15	11	0.46
4797.6	2084.4	0.1	15	11.5	0.52
4797.8	2084.3	0.1	15	12.5	0.66
4798.3	2084.1	0.3	15	13.5	0.76
4798.7	2083.9	0.7	15	14.5	0.88
4802.4	2082.3	0.1	30	11	0.48
4802.5	2082.3	0.1	30	11.5	0.53
4802.7	2082.2	0.1	30	12.5	0.65
4803.2	2082	0.1	30	13.5	0.77
4803.6	2081.8	0.4	30	14.5	0.86

Table 1 : singlemode optical output power as function of operating parameters

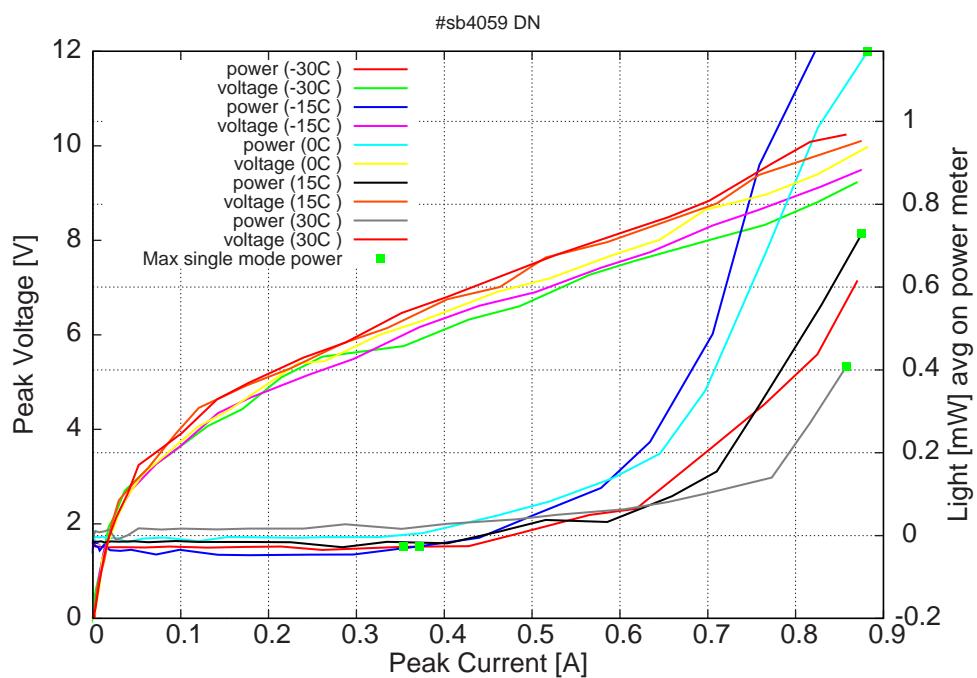
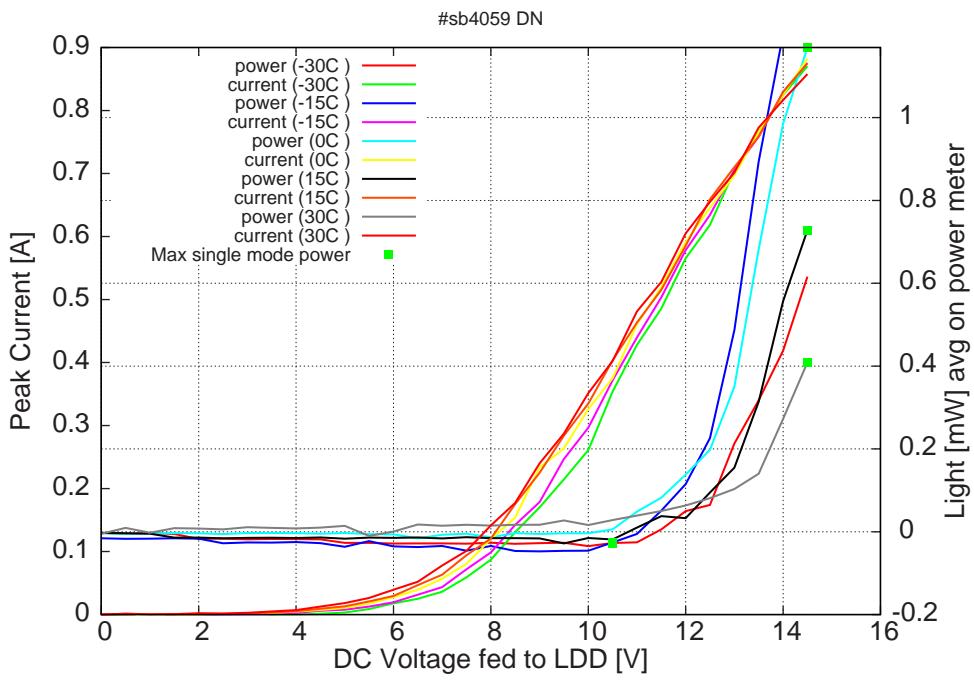
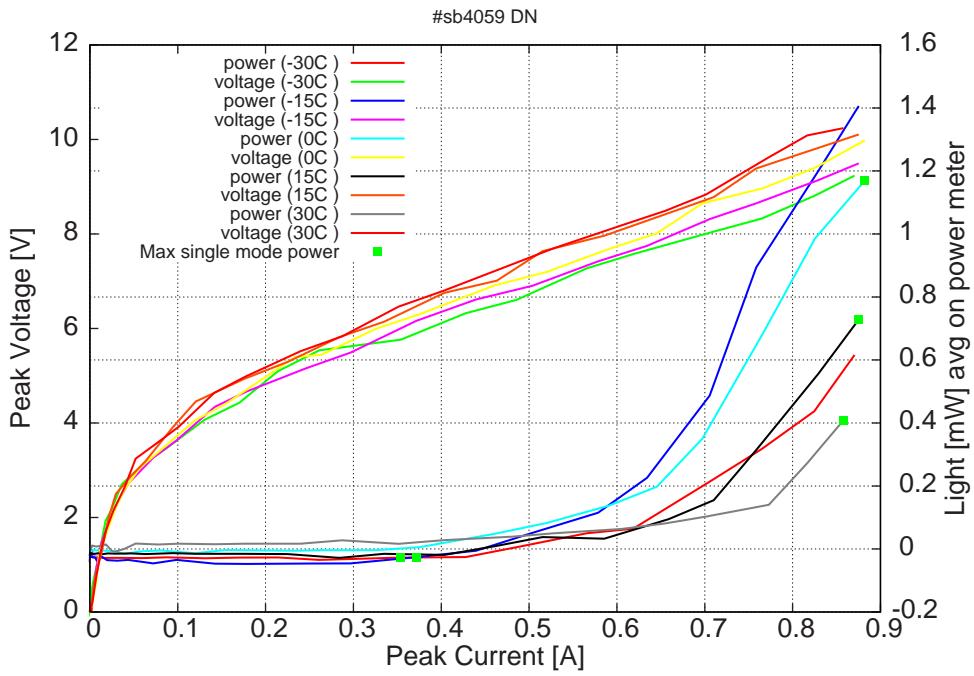


Figure 4: peak voltage and average power vs peak current at 2% duty-cycle (50ns pulses on the laser, 2.5μs period) (the solid squares indicate the maximum singlemode emitted power)



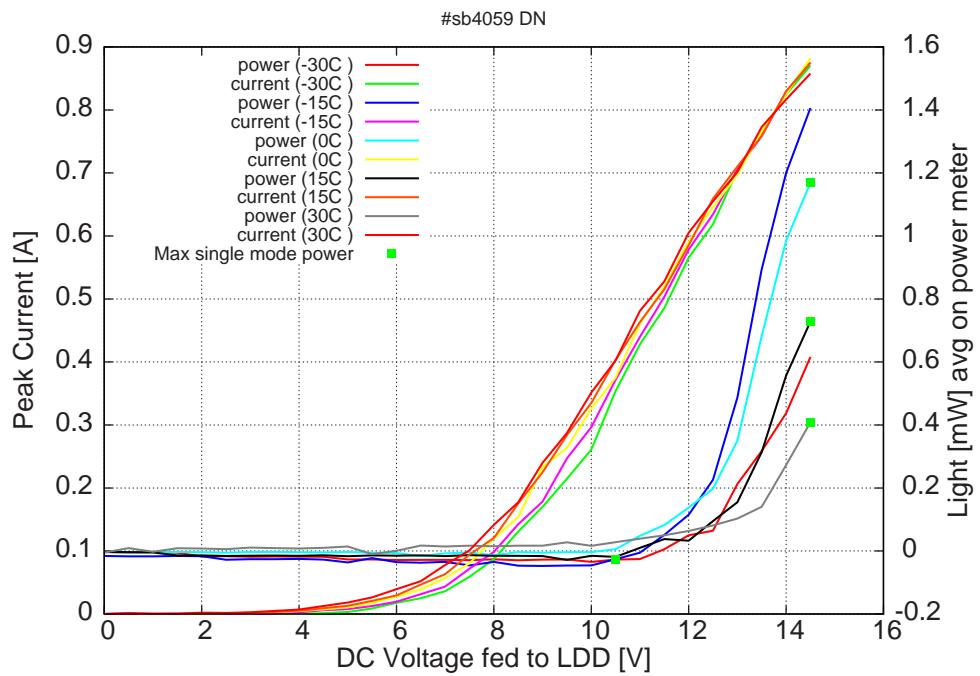
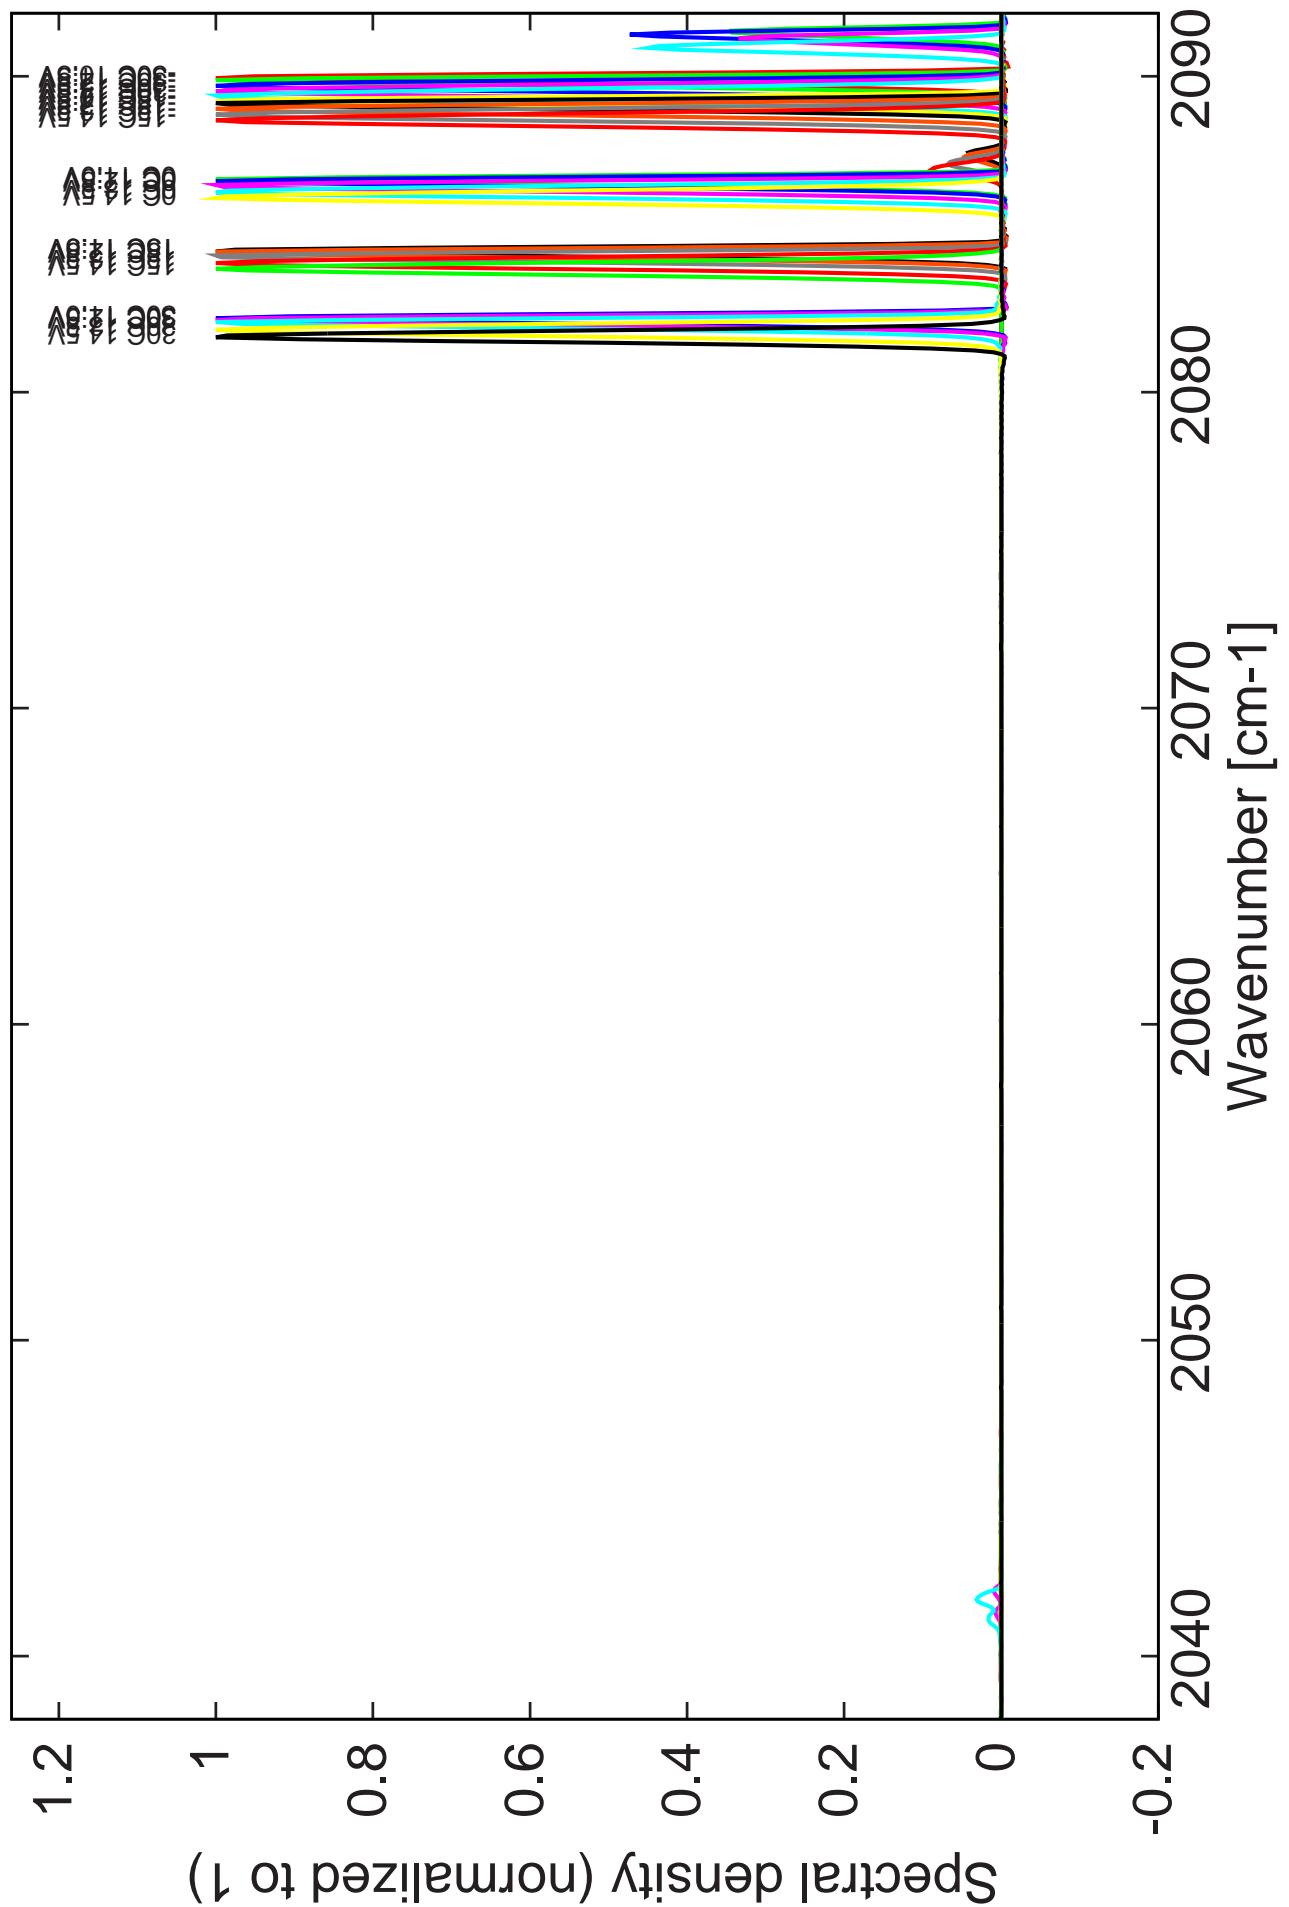


Figure 7: peak current and average power vs LDD voltage at 2% duty-cycle (50ns pulses on the laser, 2.5 $\mu$ s period) (including the multimode region)

Figure 6: spectra at different temperatures for various LDD voltages



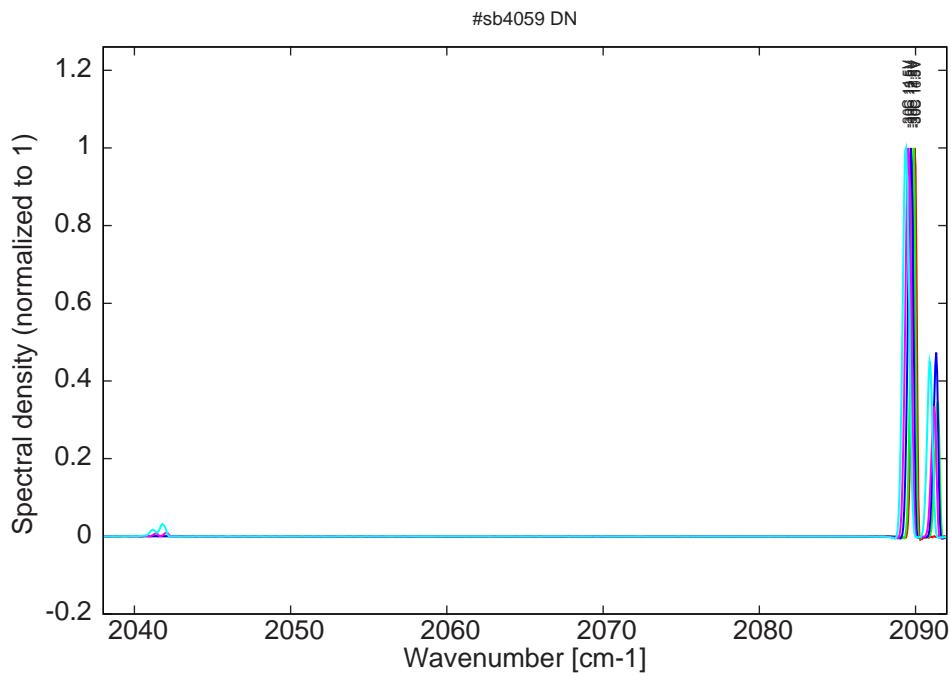


Figure 8: spectra at -30C for various LDD voltages (monomode at threshold on mode 1 then bimode and multimode).

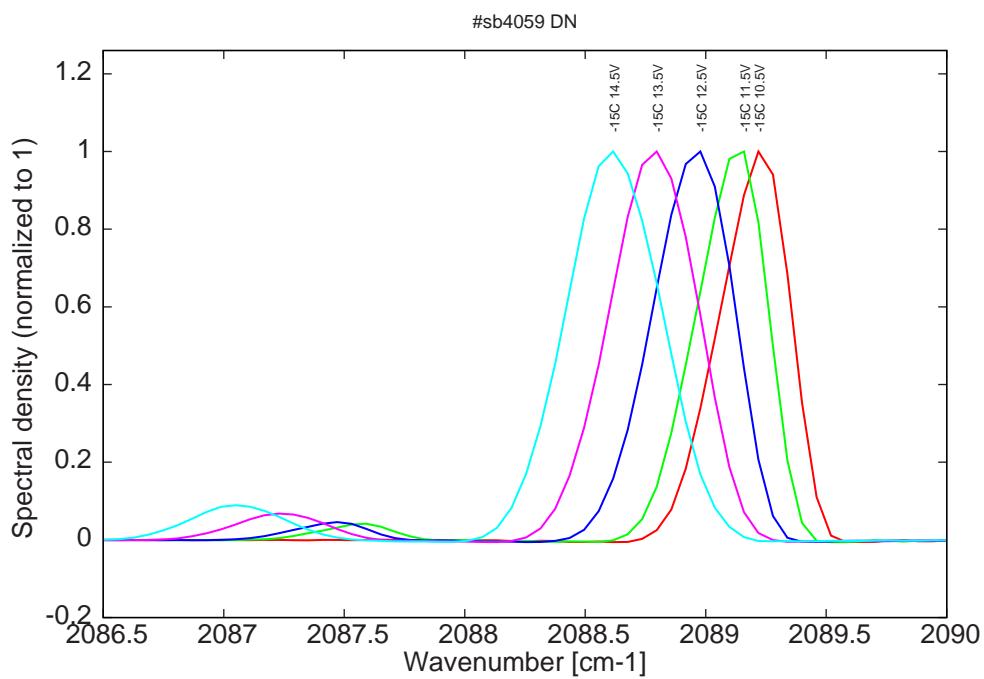


Figure 9: spectra at -15C for various LDD voltages (monomode on mode 2 at threshold then bimode).

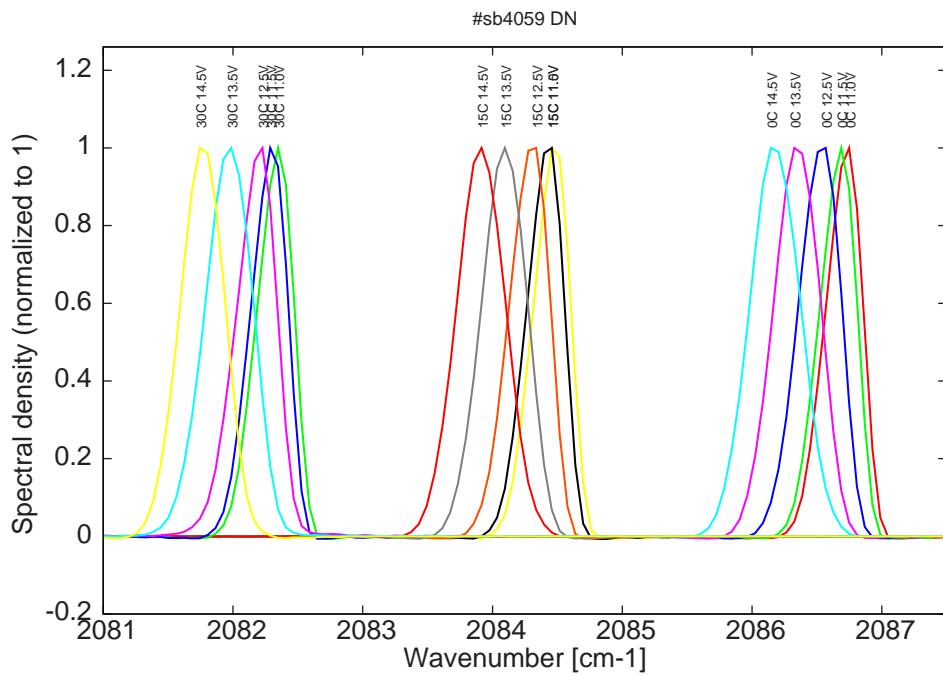


Figure 10: spectra between 0C and 30C for various LDD voltages (monomode on mode 2).