

Datasheet for #sb5593 DN

Recommendations:

Please read the User Manual and have a look at the FAQ at
<http://www.alpeslasers.ch/?a=142>

WARNING: Operating the laser with longer pulses, higher repetition rate, higher voltage or higher current than specified in this document may cause damage. It will result in loss of warranty, unless agreed upon with Alpes Lasers!

WARNING: Beware of the polarity of the laser. This laser has to be powered with negative bias on the laser contact (= bonding pad, corresponding to the label "laser" on the LLH) and the positive bias on the base contact (= submount, corresponding to the label "base" on the LLH).

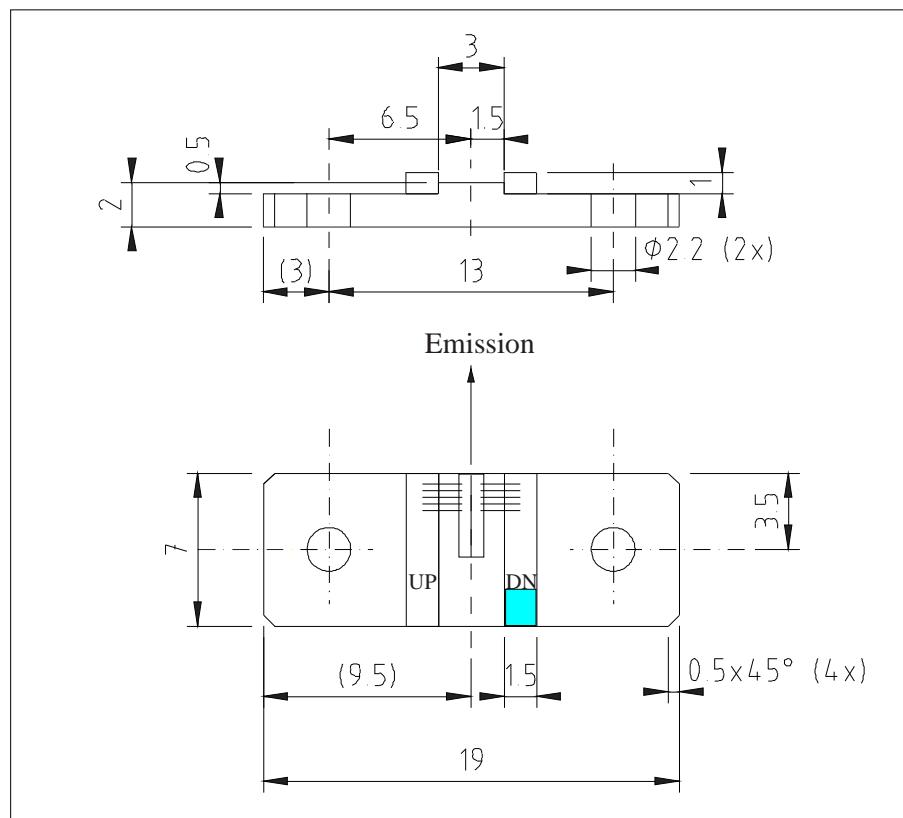


Figure 1: Support mounting for #sb5593 DN (please note that the laser is connected to the DN pad drawned in blue)

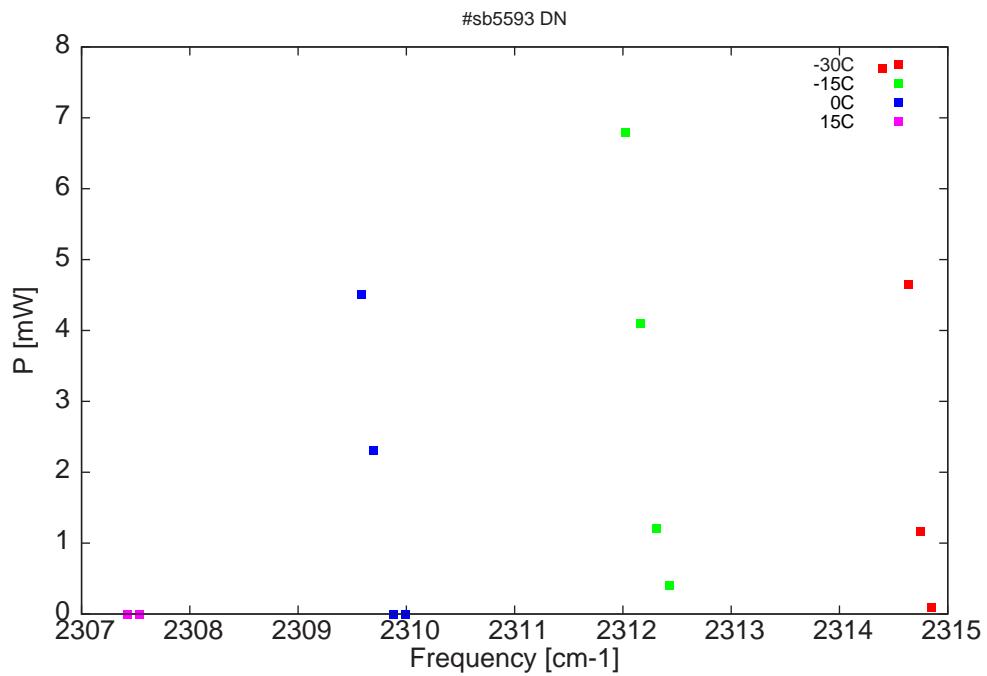


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

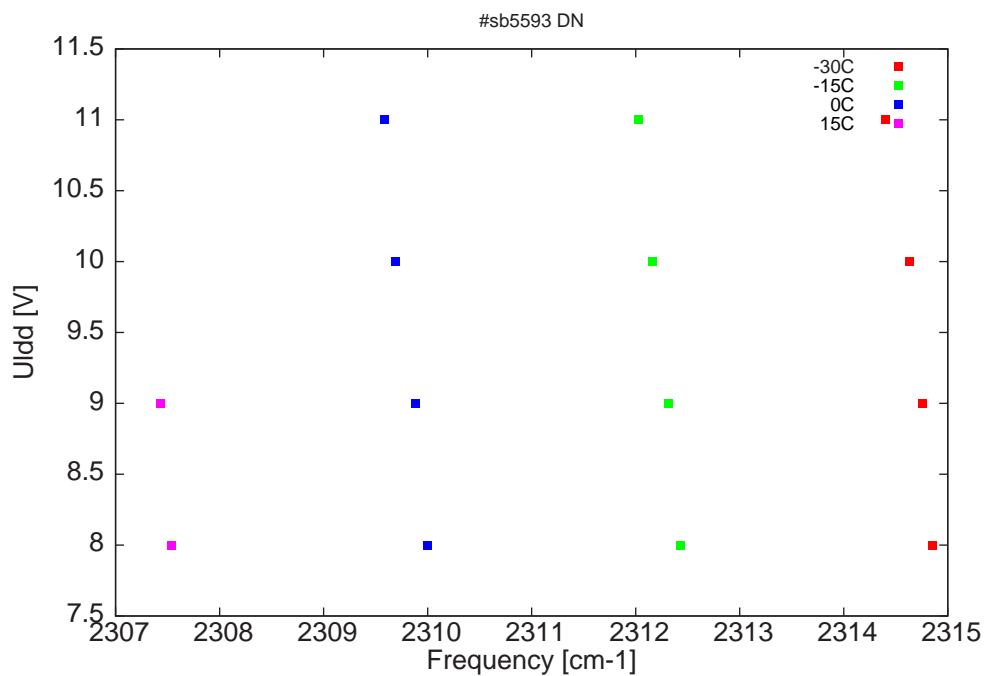


Figure 3: DC voltage fed to LDD (Uldd) as a function of the singlemode emission frequencies and temperatures

λ [nm]	ν [cm $^{-1}$]	P[mW]	Temp[°C]	U_{LDD} [V]	I_{pulse} [A]
4319.9	2314.9	0.1	-30	8	0.17
4320.1	2314.8	1.2	-30	9	0.33
4320.3	2314.6	4.7	-30	10	0.55
4320.8	2314.4	7.7	-30	11	0.78
4324.5	2312.4	0.4	-15	8	0.17
4324.7	2312.3	1.2	-15	9	0.35
4325	2312.2	4.1	-15	10	0.57
4325.2	2312	6.8	-15	11	0.82
4329	2310	0	0	8	0.2
4329.2	2309.9	0	0	9	0.36
4329.6	2309.7	2.3	0	10	0.59
4329.8	2309.6	4.5	0	11	0.8
4333.6	2307.5	0	15	8	0.23
4333.8	2307.4	0	15	9	0.4

Table 1 : singlemode optical output power as function of operating parameters

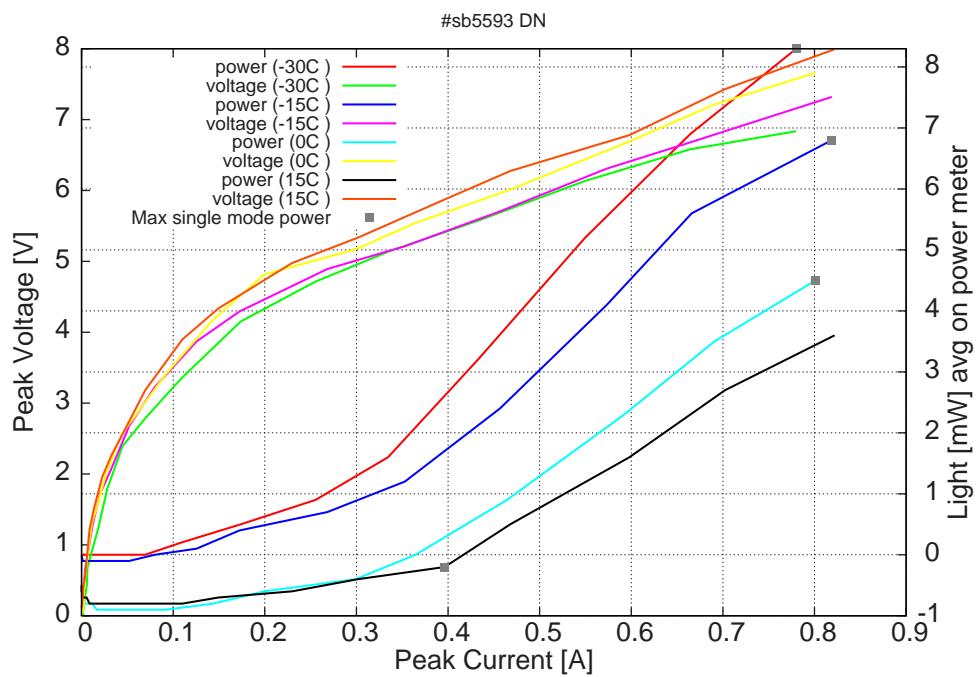


Figure 4: peak voltage and average power vs peak current at 2% duty-cycle (50ns pulses on the laser, 2.5μs period) (the solid squares indicate the maximum singlemode emitted power)

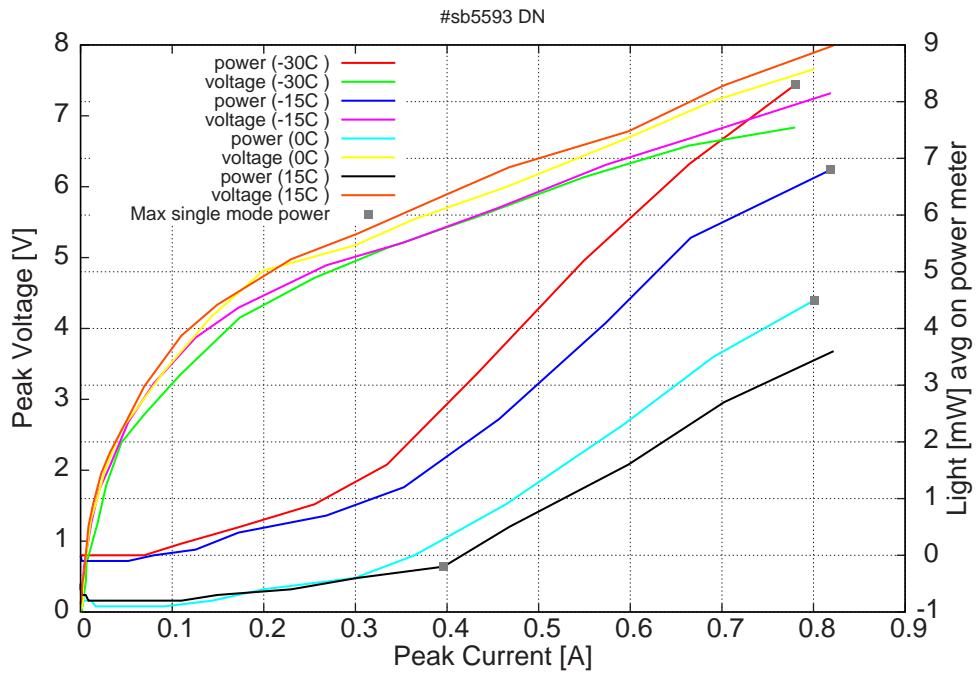


Figure 5: peak voltage and average power vs peak current at 2% duty-cycle (50ns pulses on the laser, 2.5 μ s period) (including the multimode region)

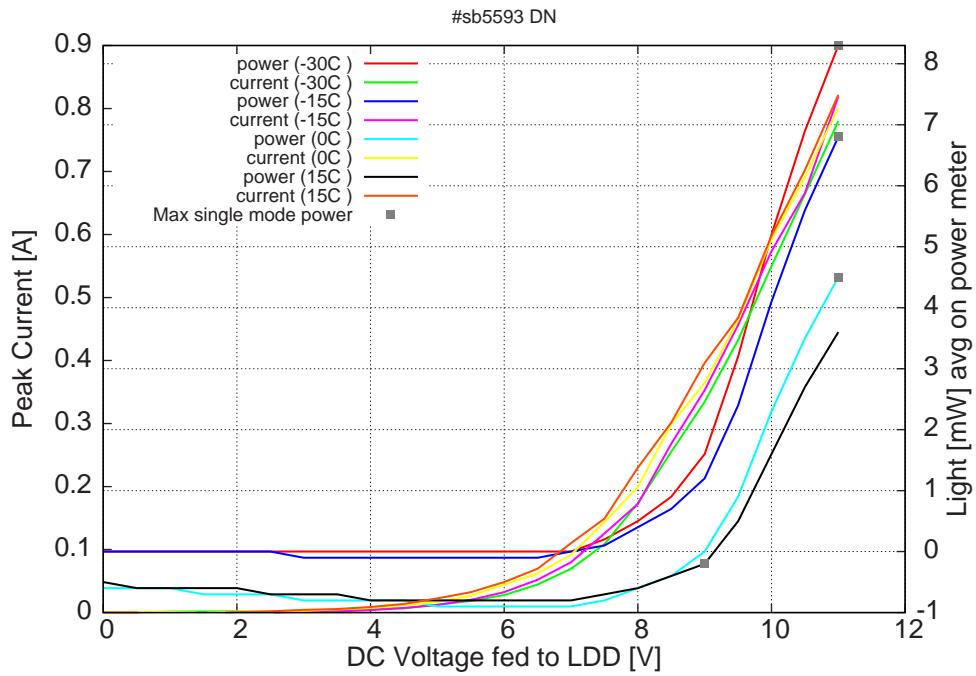


Figure 6: peak current and average power vs LDD voltage at 2% duty-cycle (50ns pulses on the laser, 2.5 μ s period) (the solid squares indicate the maximum singlemode emitted power)

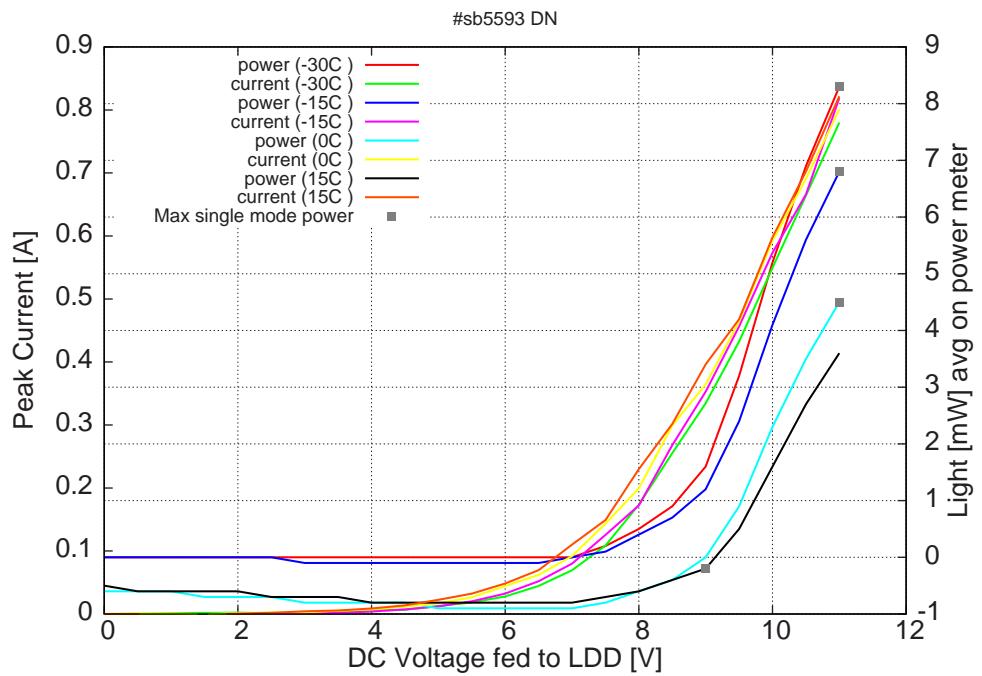
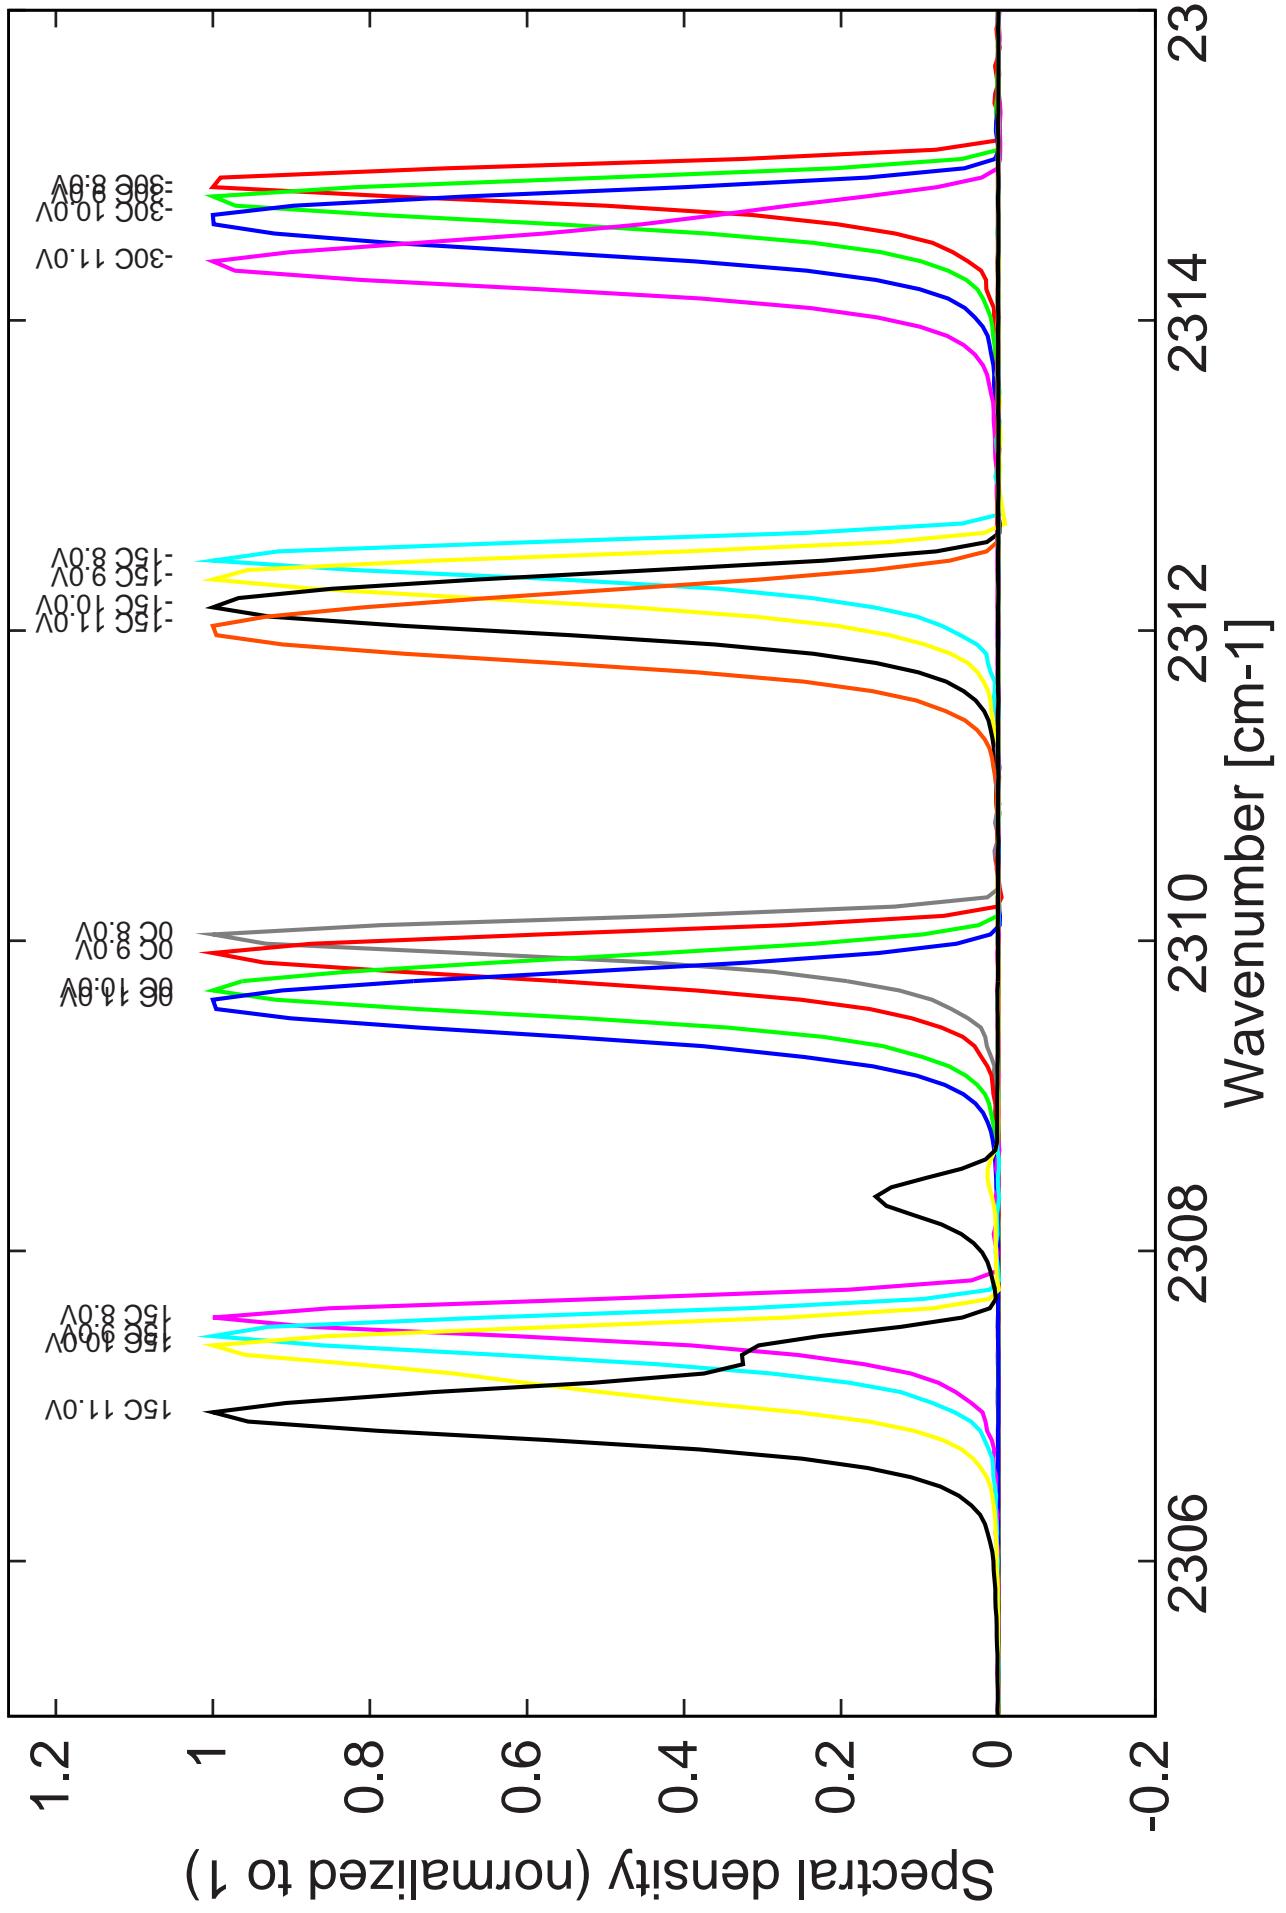


Figure 7: peak current and average power vs LDD voltage at 2% duty-cycle (50ns pulses on the laser, 2.5 μ s period) (including the multimode region)

Figure 6: spectra at different temperatures for various LDD voltages (22ns pulses, 1.1us period)



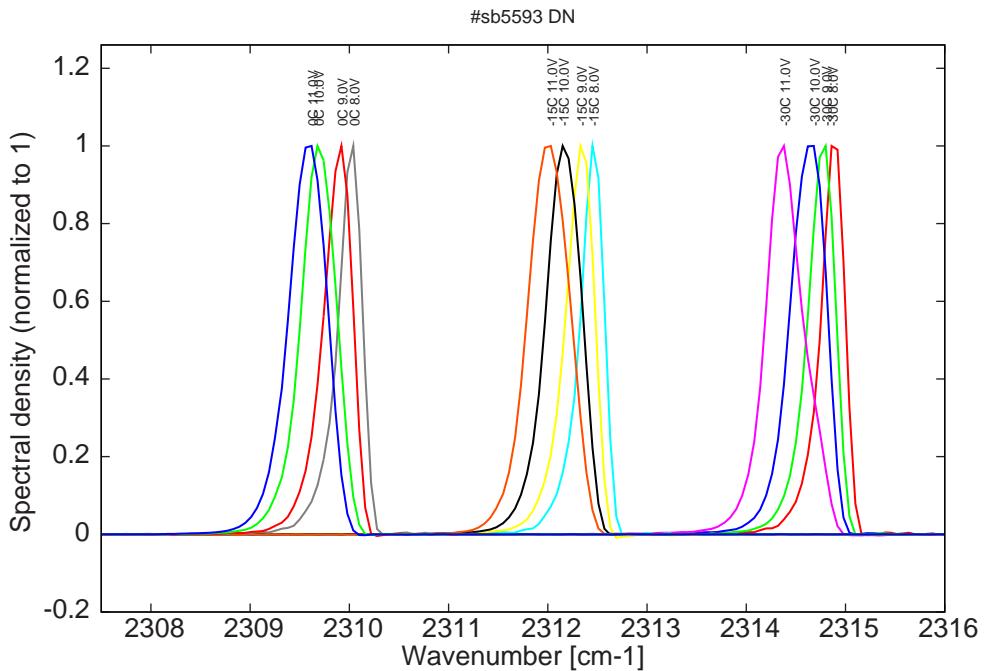


Figure 8: spectra between -30C and 0C for various LDD voltages (all monomode up to 11V on LDD)

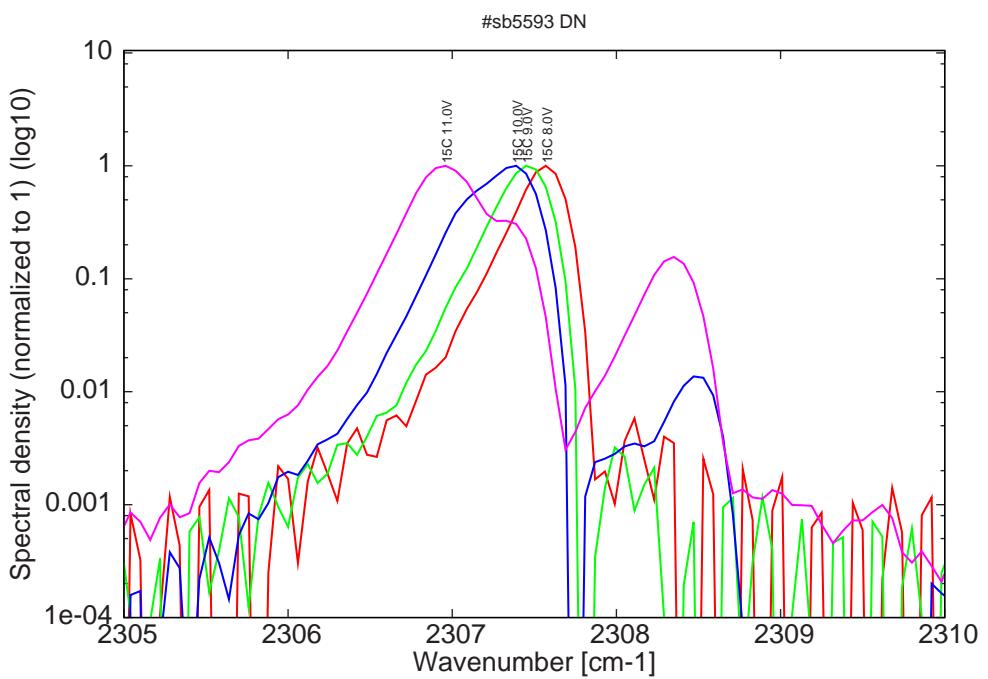


Figure 9: spectra 15C for various LDD voltages (become bimode at 10V on LDD)