

Datasheet for #sbcw3656 DN

Recommendations:

Please read the User Manual and have a look at the FAQ at <http://www.alpeslasers.ch/?a=142>

**WARNING:** Operating the laser with higher current or voltage than specified in this document may cause damage and will result in loss of warranty, unless Alpes Lasers has permitted to do so!

**WARNING:** Beware of the polarity of the laser. This laser has to be powered with negative current on the laser contact (= bonding pad, corresponding to the label "laser" on the LLH) and the positive current on the base contact (= submount, corresponding to the label "base" on the LLH). To use with a power-supply ILX Lightwave LDX-3232 or equivalent.

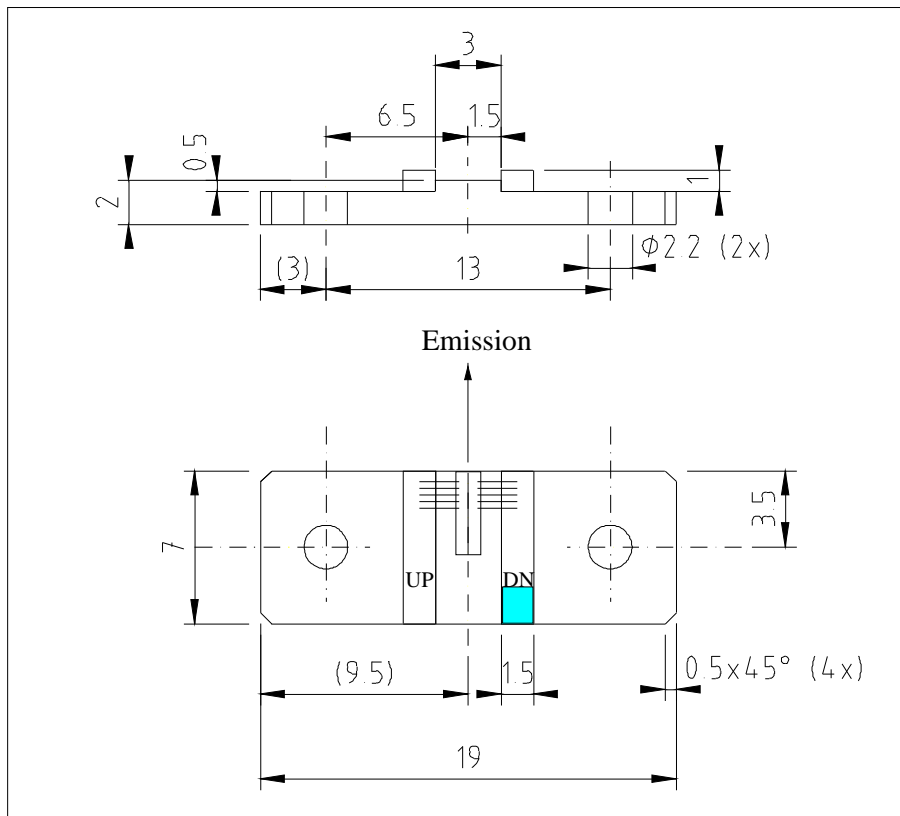


Figure 1: Support mounting for #sbcw3656 DN (please note that the laser is connected to the DN pad drawn in blue)

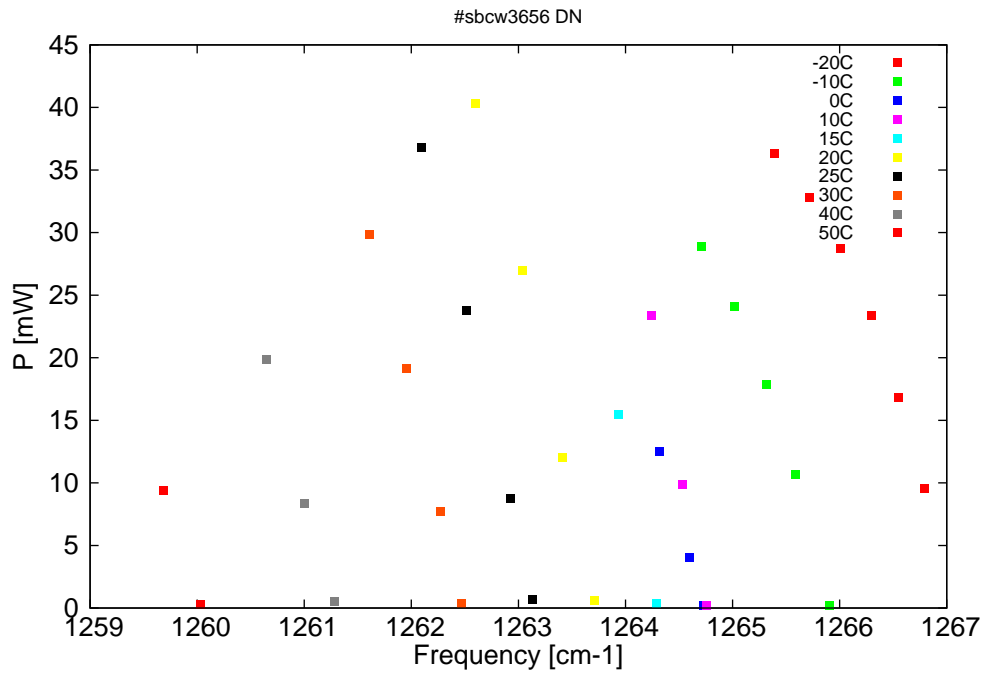


Figure 2: Output power as a function of the singlemode emission frequencies and temperatures

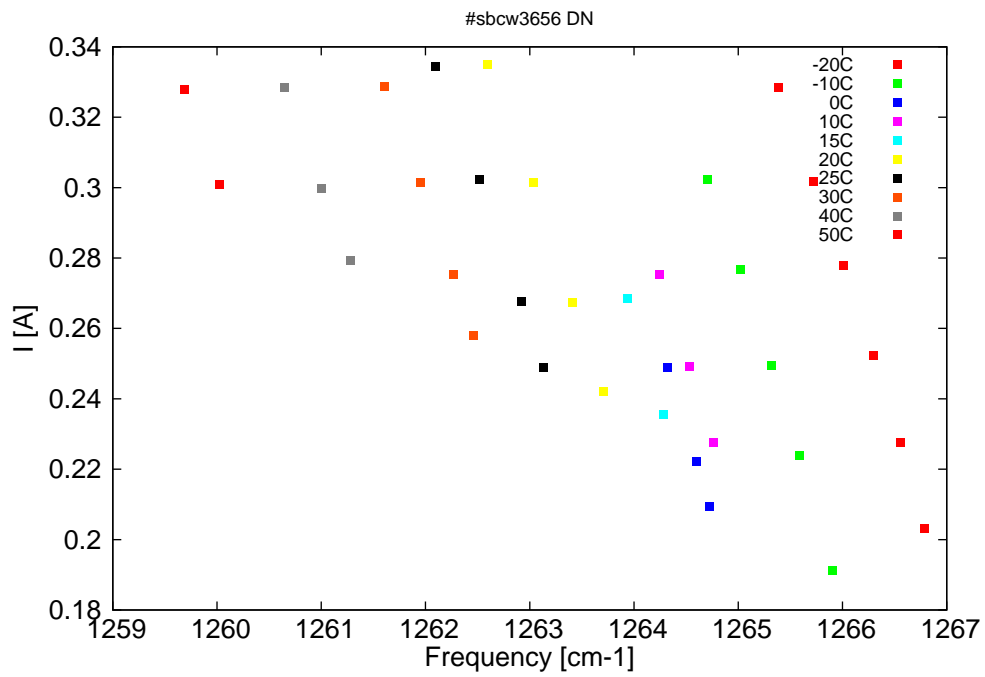


Figure 3: Applied DC current as a function of singlemode emission frequencies and temperatures

$\lambda$ [nm]	$\nu$ [cm <sup>-1</sup> ]	P[mW]	Temp[°C]	$U_{LASER}$ [V]	I[A]
7894	1266.8	9.5	-20	8.3	0.2
7895.4	1266.6	16.8	-20	8.4	0.23
7897.1	1266.3	23.4	-20	8.6	0.25
7898.8	1266	28.7	-20	8.8	0.28
7900.7	1265.7	32.8	-20	9	0.3
7902.7	1265.4	36.3	-20	9.2	0.33
7899.5	1265.9	0.2	-10	8.1	0.19
7901.5	1265.6	10.7	-10	8.3	0.22
7903.2	1265.3	17.9	-10	8.5	0.25
7905	1265	24.1	-10	8.7	0.28
7907	1264.7	28.9	-10	8.9	0.3
7906.8	1264.7	0.2	0	8.1	0.21
7907.6	1264.6	4	0	8.2	0.22
7909.4	1264.3	12.5	0	8.4	0.25
7906.6	1264.8	0.2	10	8.2	0.23
7908	1264.5	9.9	10	8.3	0.25
7909.8	1264.2	23.4	10	8.5	0.28
7909.6	1264.3	0.4	15	8.2	0.24
7911.8	1263.9	15.5	15	8.4	0.27
7913.2	1263.7	0.6	20	8.2	0.24
7915.1	1263.4	12	20	8.4	0.27
7917.4	1263	27	20	8.6	0.3
7920.2	1262.6	40.3	20	8.8	0.33
7916.9	1263.1	0.7	25	8.2	0.25
7918.1	1262.9	8.7	25	8.3	0.27
7920.7	1262.5	23.8	25	8.6	0.3
7923.3	1262.1	36.8	25	8.8	0.33
7921	1262.5	0.4	30	8.2	0.26
7922.2	1262.3	7.7	30	8.3	0.28
7924.2	1261.9	19.2	30	8.5	0.3
7926.4	1261.6	29.9	30	8.7	0.33
7928.5	1261.3	0.6	40	8.3	0.28
7930.2	1261	8.4	40	8.4	0.3
7932.4	1260.6	19.8	40	8.6	0.33
7936.3	1260	0.3	50	8.3	0.3
7938.5	1259.7	9.4	50	8.5	0.33

Table 1: Singlemode optical output power as function of operating parameters.

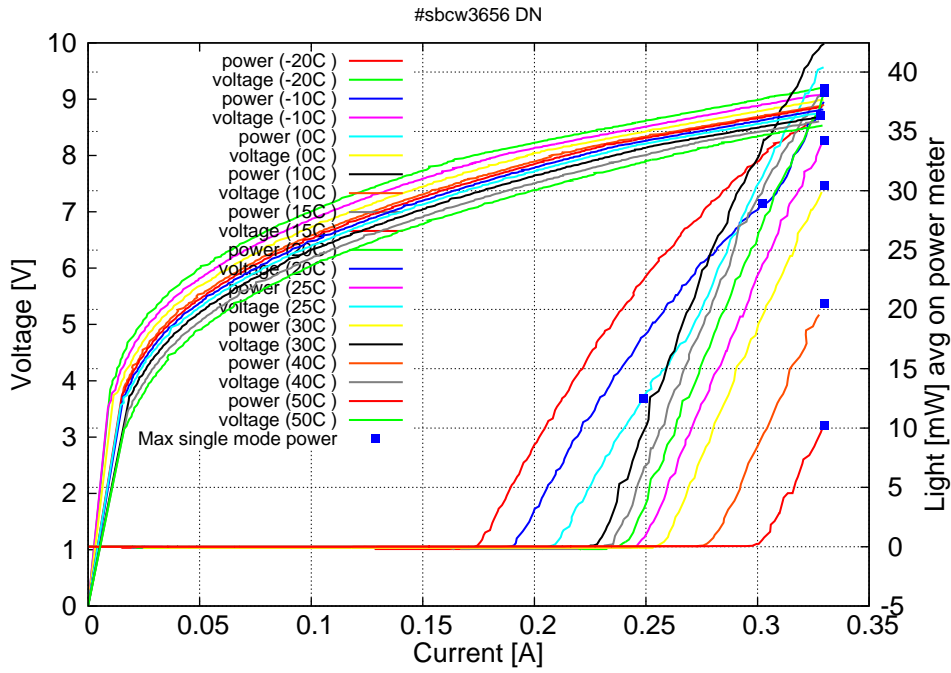


Figure 4: voltage and avg power vs current in continuous-wave operation (the solid squares indicate the maximum singlemode emitted power)

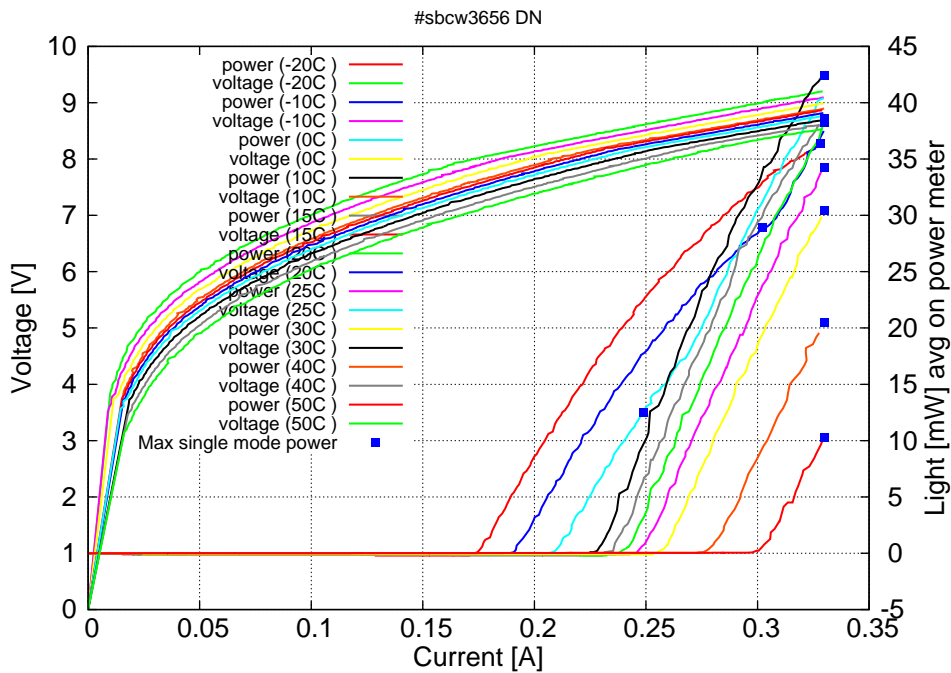
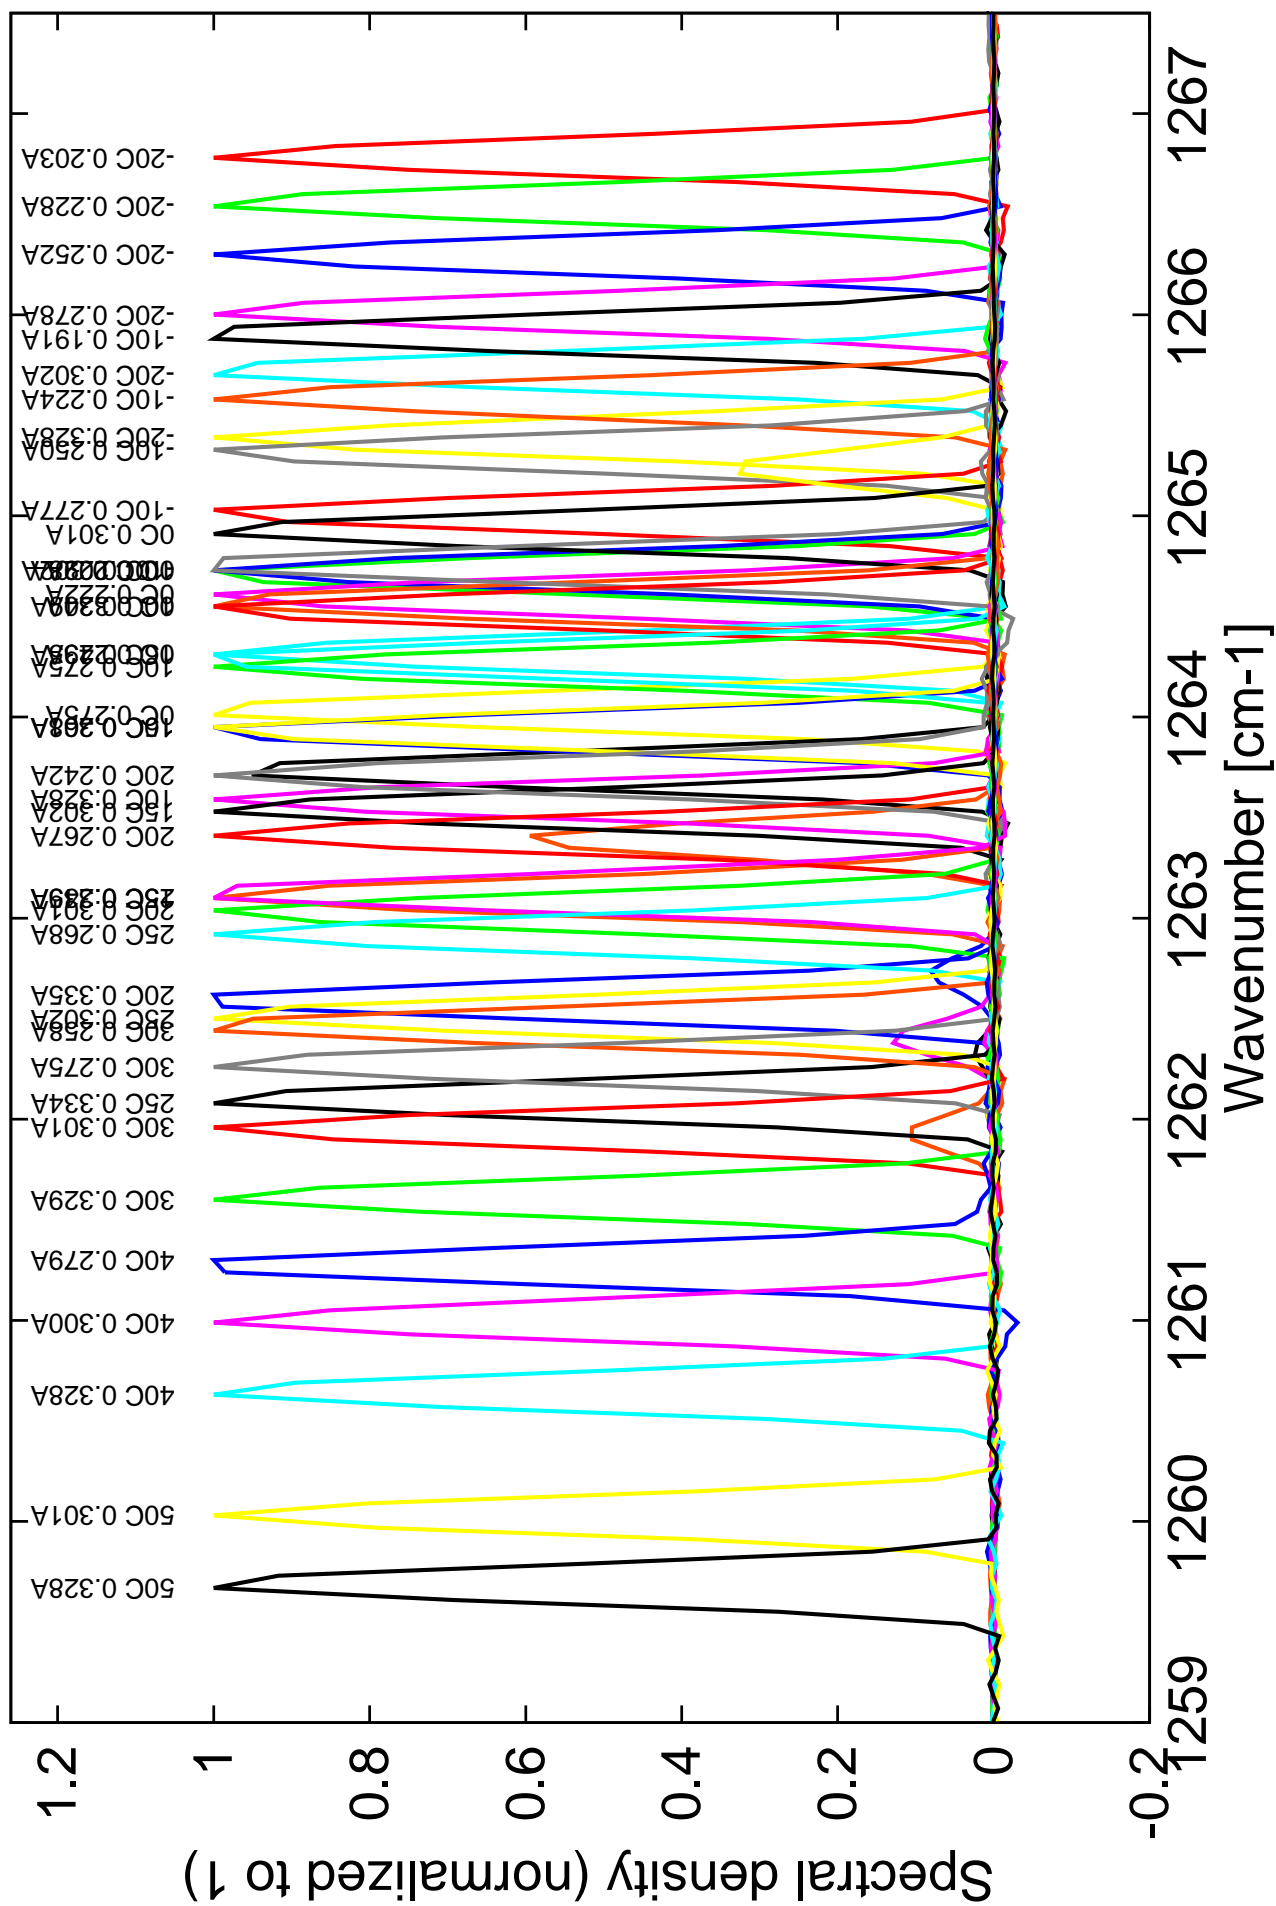


Figure 5: voltage and avg power vs current in continuous-wave operation (including the multimode region)

Note: at -20C:  $I_{th}=0.20A$  /  $V_{th}=8.3V$  (2-wires measurements). Maximum operation current: 0.330A for all temperatures.

Figure 4: spectra at different temperatures for various DC currents



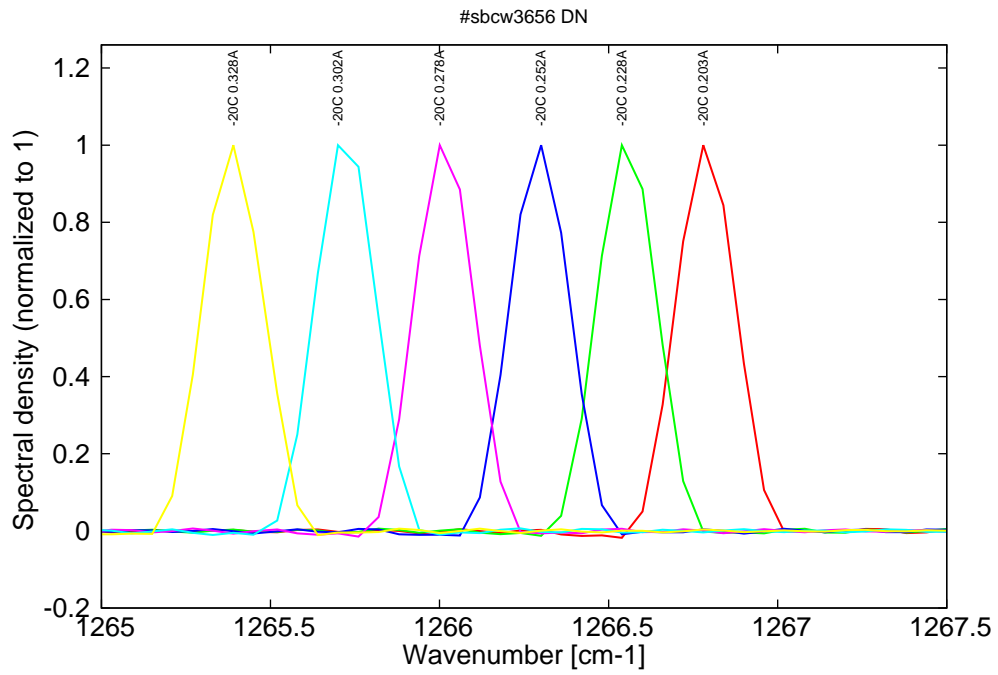


Figure 6: spectra at -20C for various DC currents (monomode on mode 1)

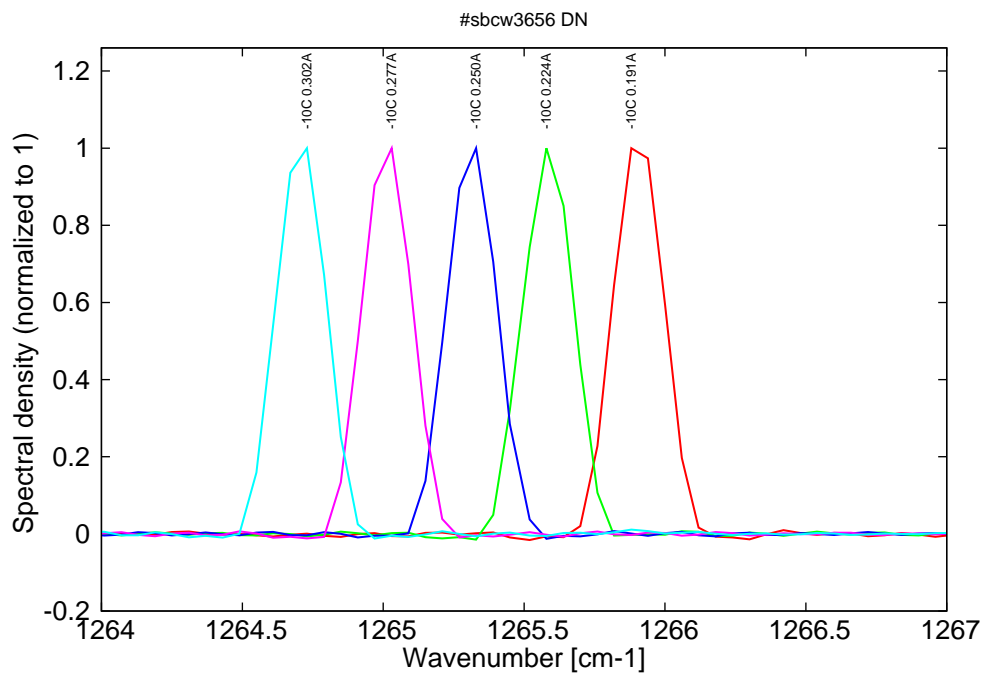


Figure 7: spectra at -10C for various DC currents (monomode on mode 1)

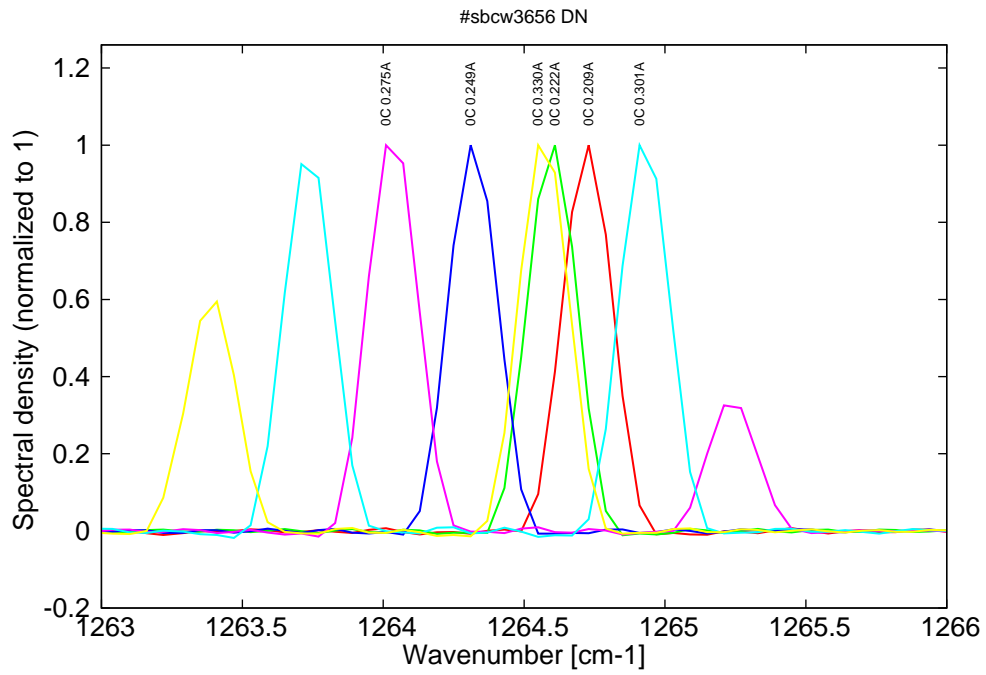


Figure 8: spectra at 0C for various DC currents (monomode on mode 1 up to 0.25A, then becomes bimode)

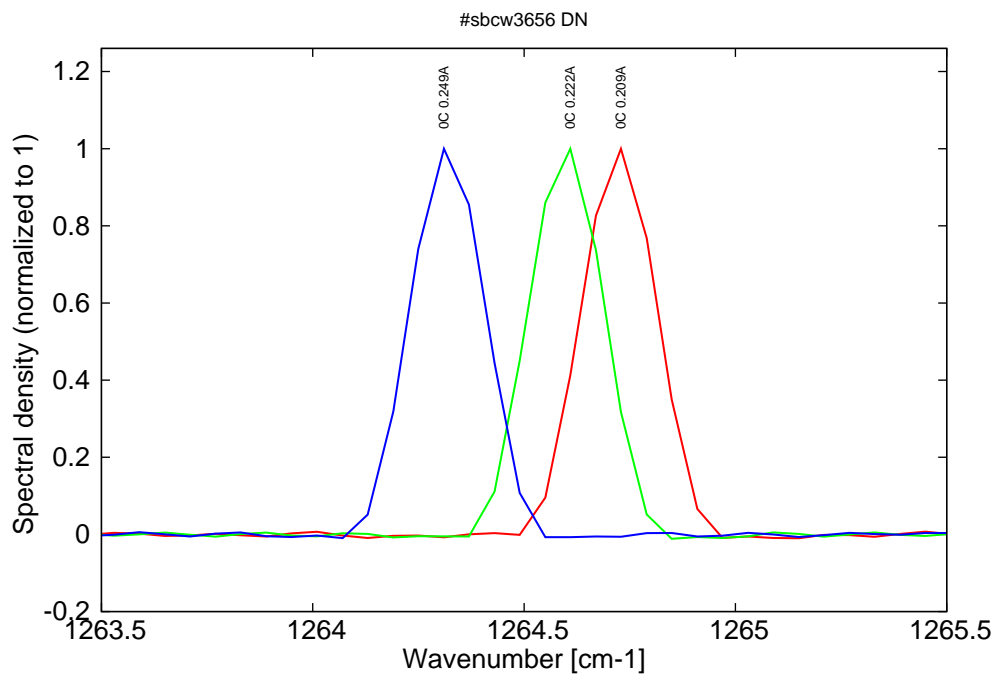


Figure 9: spectra at 0C for various DC currents (monomode range)

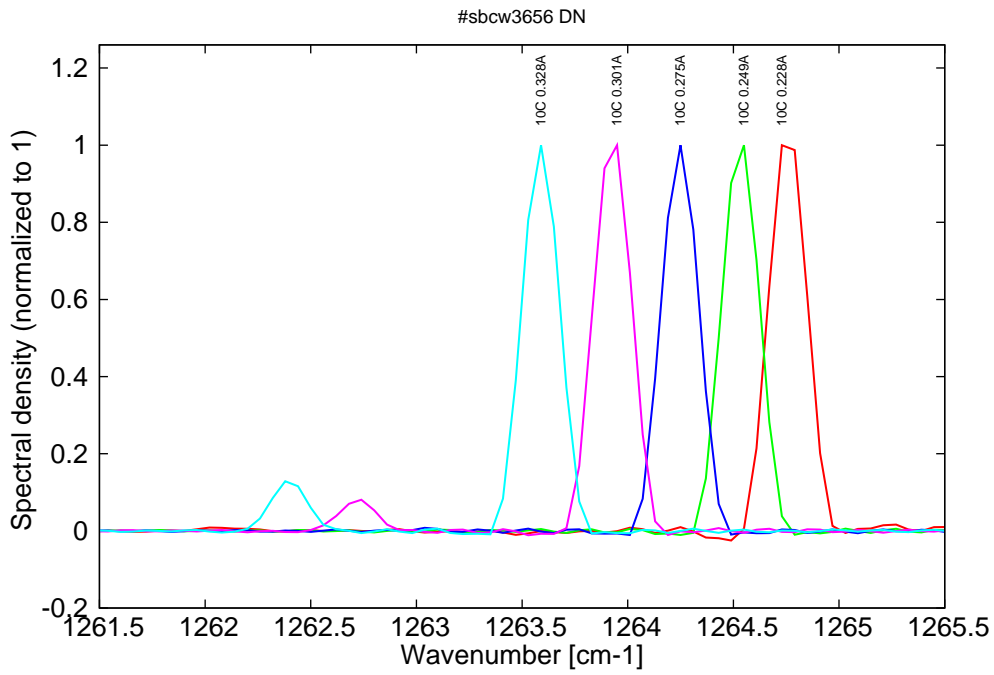


Figure 10: spectra at 10C for various DC currents (monomode on mode 2 up to 0.275A, then becomes bimode)

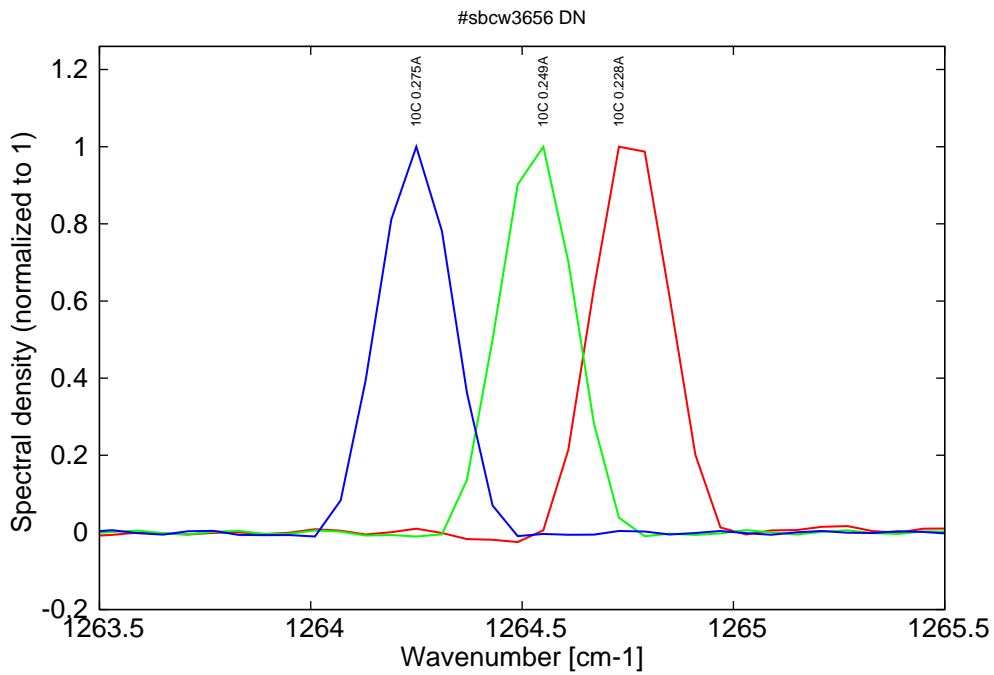


Figure 11: spectra at 10C for various DC currents (monomode on mode 2 range)



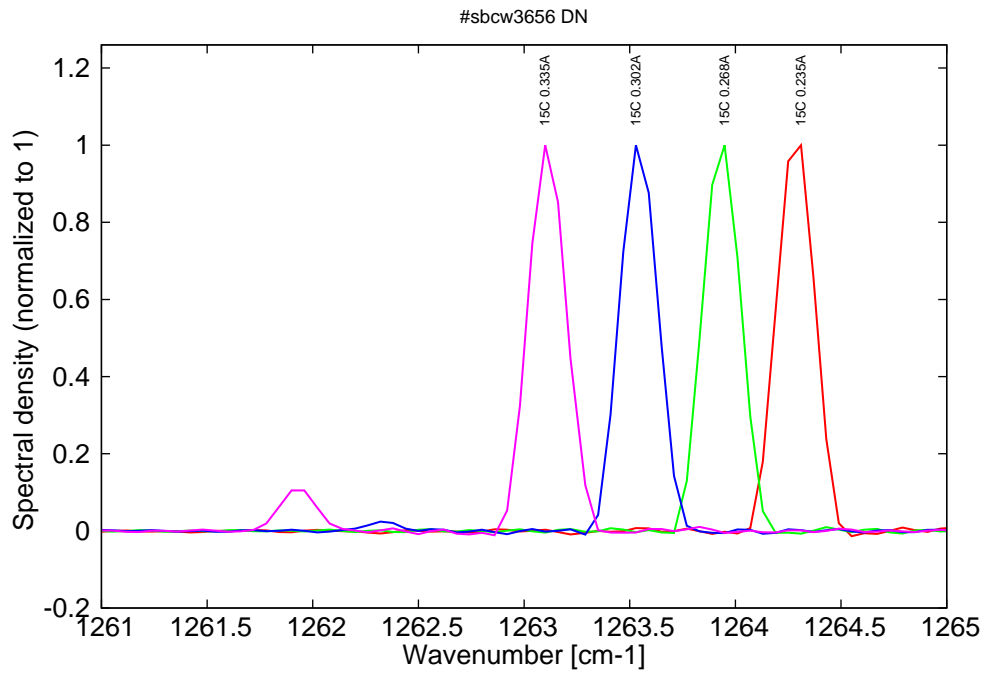


Figure 12: spectra at 15C for various DC currents (monomode on mode 2 up to 0.275A, then becomes bimode)

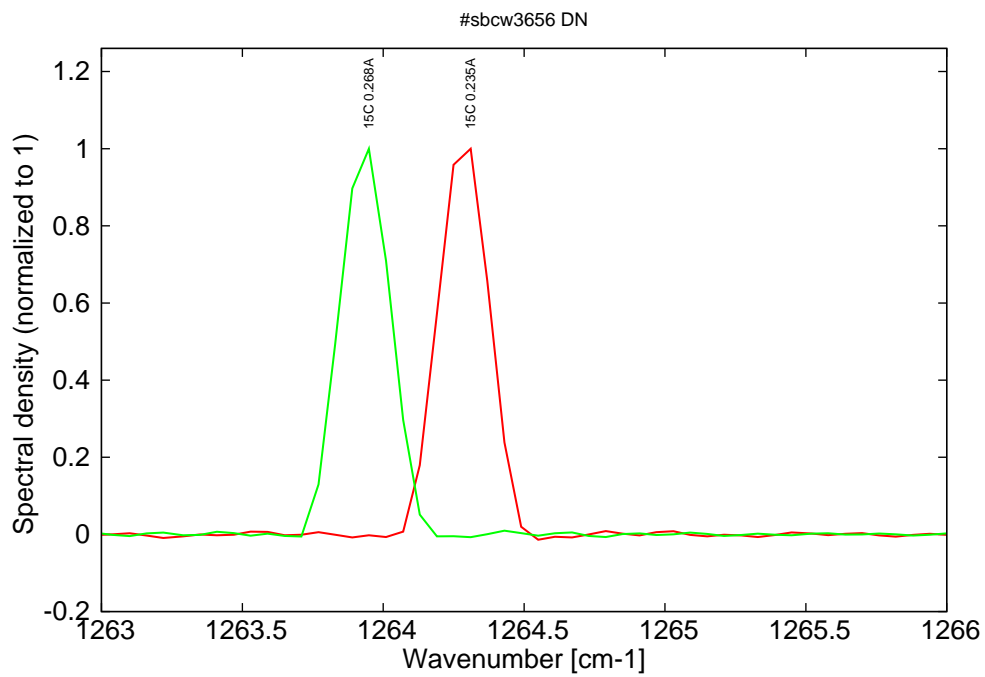


Figure 13: spectra at 15C for various DC currents (monomode range)

Figure 13: spectra between 20C and 50C for various DC currents (all monomode on mode 2)

